NOTES:

1. IT IS RECOMMENDED TO RUN ALL SENSOR WIRES THROUGH THE WATER TIGHT GLAND ON THE FAR **RIGHT** SIDE OF THE iGROW 1400. THIS CONSERVES THE TWO MIDDLE GLANDS FOR OUTPUT WIRING.

2. THIS DRAWING IS NOT TO SCALE.

3. SOFTWARE SETTINGS: USING THE iGROW1400s KEYPAD, GO TO *Setup Inputs*, AND SET *Rain* TO **FDIn2**.

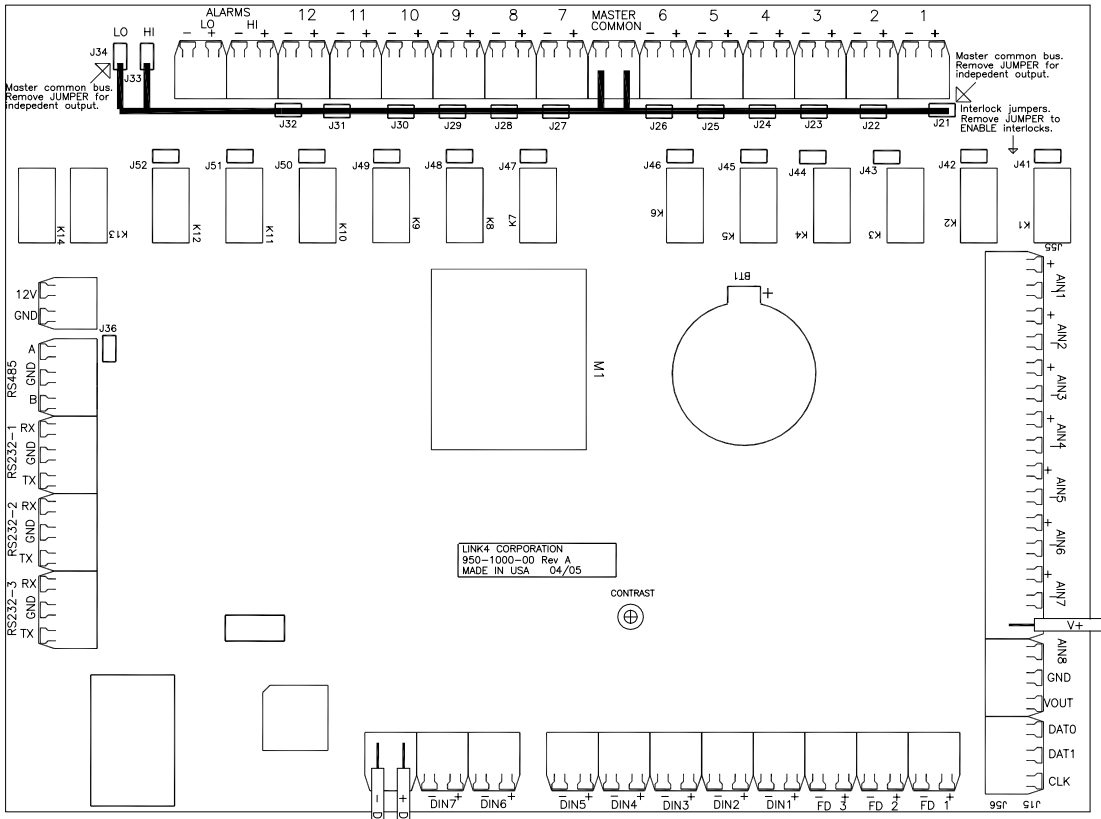

WIRING INSIDE RAIN SENSOR

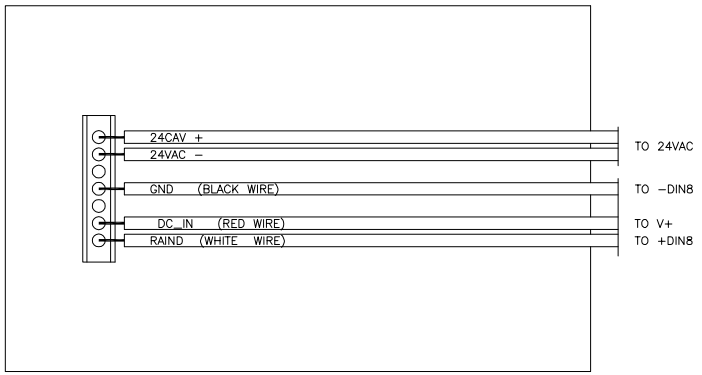

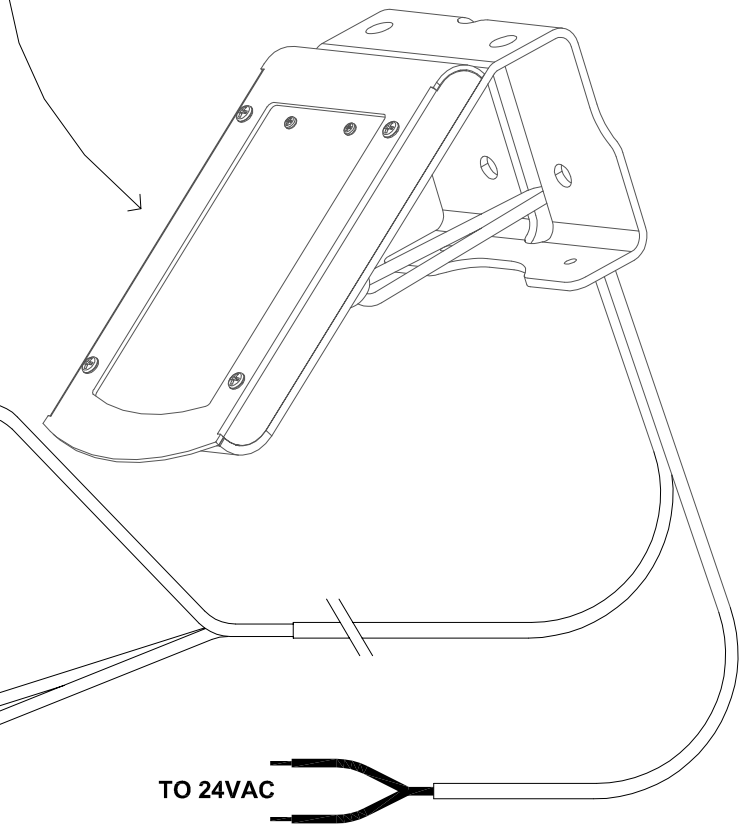

TO 24VAC